HIGH TEMPERATURE DISH MACHINE

Deliming/Descaling Procedures

Cleaning Procedures

- 1. Turn off detergent dispensing equipment
- 2. Turn off dish machine, heater/booster heater
- 3. Empty water from the wash tank(s)
- 4. Remove, clean, and replace screens, scrap trays, etc.
- 5. Inspect lower and upper wash arms, clean if needed
- 6. Inspect rinse jets, remove and open tips if needed
- 7. Refill machine with fresh water
- 8. Add Deliming/Descaling Solution into machine wash tank
- 9. Turn machine on; **KEEP HEATING ELEMENTS OFF**
- 10. Cycle dish machine until it is free of lime scale
- 11. Inspect wash arms, rinse jets, etc.
- 12. If needed, add more Deliming/Descaling Solution and continue to cycle machine

After Machine is Clean and Free of Lime Scale

- 13. Turn machine off
- 14. Empty water from wash tank
- 15. Refill machine with fresh water
- 16. Turn on machine, heater/booster heater and detergent dispenser

Machine is now READY for use





Low Foam Delimer NL352-G4

